



| WIRING DIAGRAM LEGEND |                 |    |
|-----------------------|-----------------|----|
|                       | Live            | L  |
|                       | Earth           | E  |
|                       | Neutral         | N  |
|                       | Switched Live   | SL |
|                       | Switched Live   | SL |
|                       | Common          | C  |
|                       | Hot Water       | HW |
|                       | Central Heating | CH |

| 4IE TERMINAL LEGEND |                  |     |
|---------------------|------------------|-----|
| N                   | Supply - Neutral | N   |
| L                   | Supply - Live    | L   |
| 1                   | Load - Live      | L   |
| 2                   | Common           | COM |
| 3                   | Normally Open    | NO  |
| 4                   | Normally Closed  | NC  |

Note: If a UFH zone valve is not required or if it is connected directly to the UFH wiring centre, then the wiring connection from boiler SL on the wiring centre would go into terminal 13, instead of terminal 9.

